



∅ 16 mm

# VIA FERRATA



VERTICAL ANCHORS

## REBAR - Stainless Steel AISI 316L FOR VERTICAL ANCHORS

Technical Sheet

certificate

EN 16869:2017

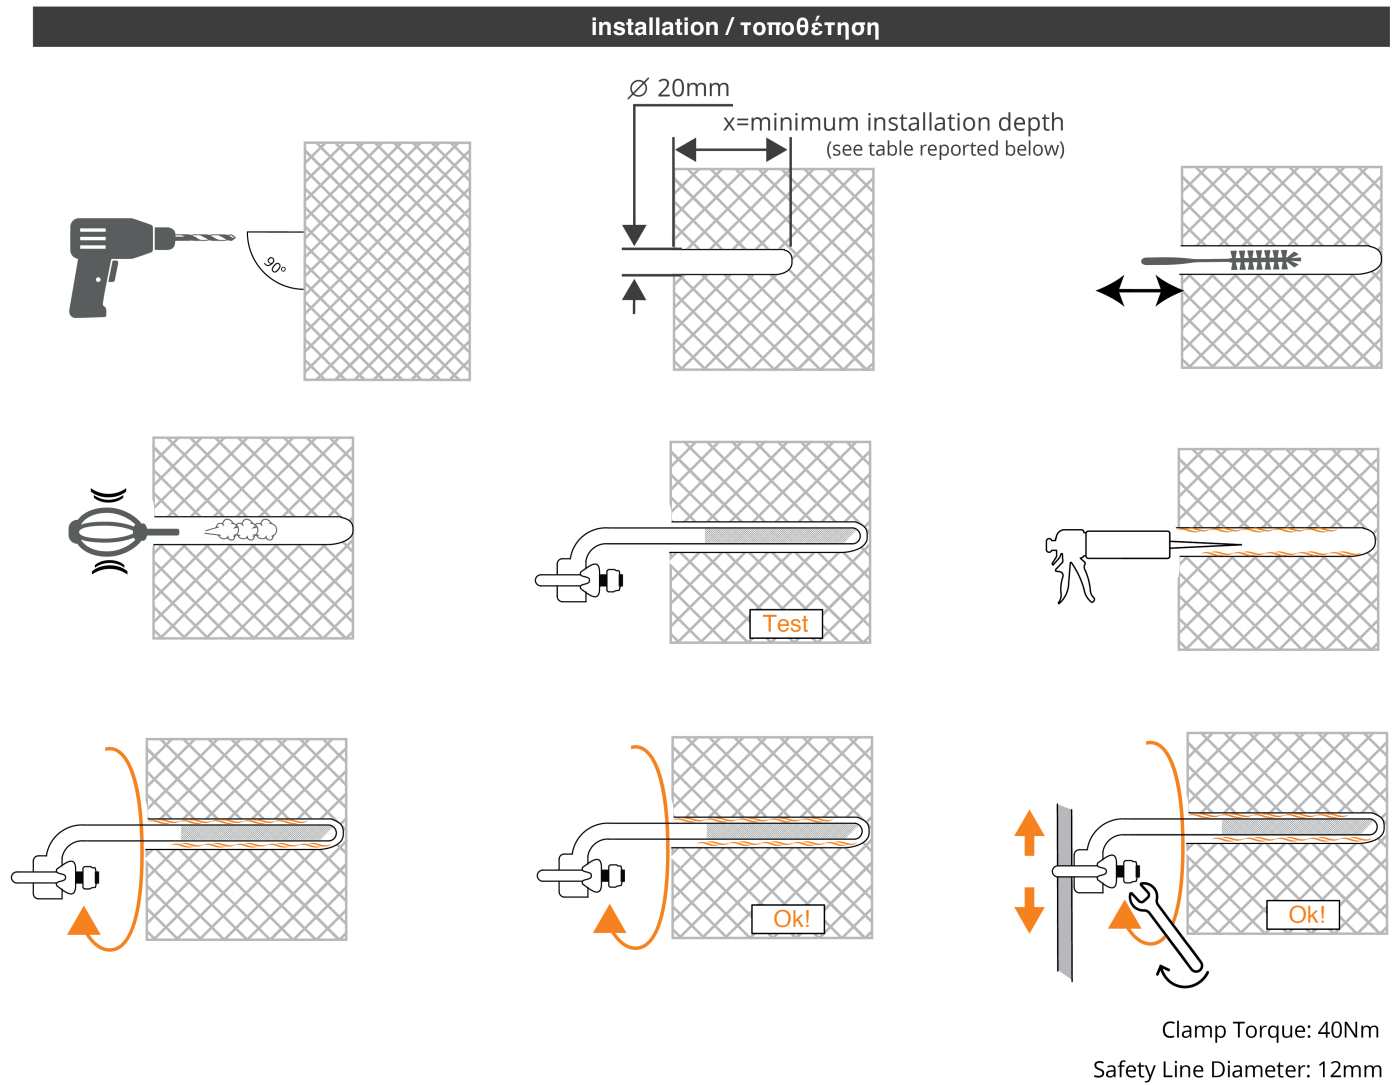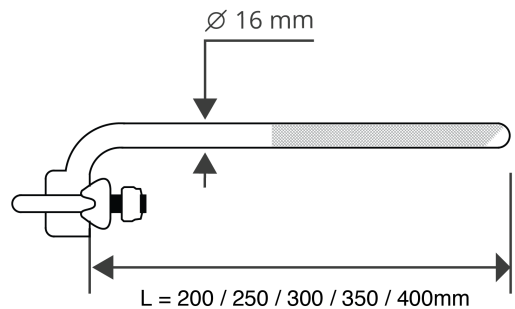


Read instructions before use.

Use two components resin.

After the resin, do not touch the anchor and use it placed no earlier than 24 hours, even better if not least after 2/3 days (dependent on ambient temperature...).

Still comply with the direction set by the factory of the resin used.

The use of polyester type glue shall not be recommended.

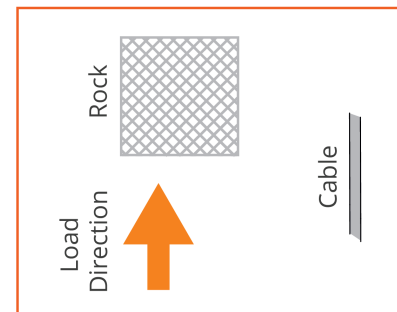

Variant	Minimum Installation Depth (mm)
16400	280 mm
16350	230 mm
16300	180 mm
16250	160 mm
16200	160 mm